

VENTINOX® RIGID

FACTORY-BUILT LINING SYSTEM

INSTALLATION AND OPERATING INSTRUCTIONS


5", 6", 7" & 8" Dia.

**FOR USE IN EXISTING OR
NEW MASONRY CHIMNEYS**

**FOR USE WITH SOLID
LIQUID OR GASEOUS
FUEL BURNING
APPLIANCES
PRODUCING FLUE GAS
TEMPERATURES OF
LESS THAN 650°C**

**TESTED TO:
1150°C
2100°F**

**STANDARD:
ULC-S635M
ULC- S640M
UL-1777**

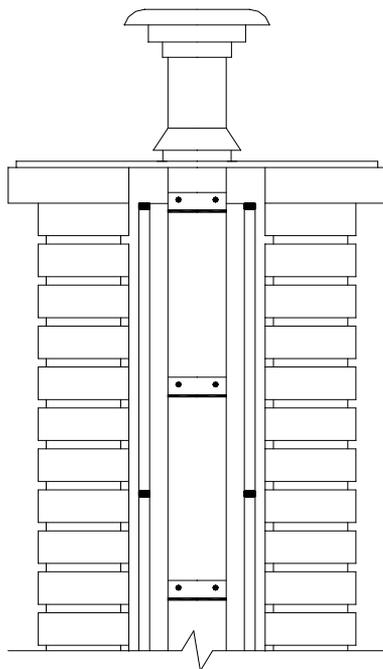

DuraVent
Member of & M&G Group

Installation and Operating Instructions

Read these instructions and keep them for future reference.

Before installing this liner, consult your local building authority and obtain a building permit. Install the liner as described in these instructions. Only use parts supplied by DuraVent. Failure to do so will void the certification and the guarantee of this chimney.

GENERAL NOTES

1. Ventinox Rigid lining system can be substituted to the traditional clay tile liner in new masonry chimney construction.
2. The liner is intended for use with solid, liquid and gaseous fuel burning appliances at these allowable flue gas temperatures :

	U.S	CANADA
Maximum continuous	1000 F 540 C	1200 F 650 C
Brief forced firing	1400 F 760 C	1700 F 925 C
Tested to	2100 F 1150 C (10 min)	2100 F 1150 C (30 min)

TABLE 1

3. Size the liner in accordance with the appliance manufacturer's instructions. The liner must not be smaller than the appliance flue outlet.
4. The chimney shall extend at least 3 ft (915 mm) above its point of contact with the roof and at least 2 ft (10 mm) higher than any wall, roof or adjacent building within 10 ft (3 m) of it (fig. 1).
5. The clearance between single wall stove pipe and unprotected combustible material must not be less than 18" (457 mm) (See National Building Code or NFPA).
6. A rain cap must be used on top of the liner to prevent the entrance of debris, rain, birds or small animals into the liner.
7. Homeowners must be reminded to check the rain cap for icing during conditions of low ambient temperatures due to the possibility of blockage through freezing moisture. The local authority having jurisdiction should be consulted if a rain cap is considered in areas of low ambient temperature.
8. Masonry chimney construction :
 - The masonry chimney must be built with bricks

and mortar conformed to the Building Code.

The flue opening dimension must always leave the liner free to expand.

9. The maximum height of liner that can be installed is 60 feet (18 m).
10. Special precaution should be taken in choosing the correct size of liner system in colder climate region. Poor draft, excessive condensation and creosote build-up could occur if the liner system is too big for the application.
11. Sharp bends that would crimp and restrict the cross-section of the liner are prohibited.

MASONRY CHIMNEY

Before installing the liner into an existing masonry chimney, the chimney must be thoroughly cleaned and examined. Check to ensure that the chimney is structurally sound.

Check for cracked, loose or missing bricks, moisture or other materials that could inhibit correct installation of the liner.

Clearances from masonry to building framing unless insulated (see installation guideline) :

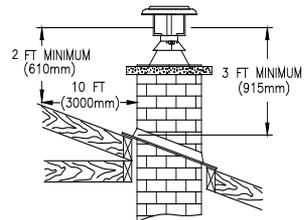


Figure 1

For a new masonry chimney liner installation make sure that the masonry chimney construction and clearances between the chimney exterior and combustible materials are as specified in NFPA 211 (USA) or the National Building Code (Canada). (See table 2).

	NFPA211	NATIONAL BUILDING CODE
INTERIOR INSTALLATION	2" (50mm)	2" (50mm)
EXTERIOR INSTALLATION	1" (25mm)	1/2" (12.5mm)

TABLE 2

YOU CAN DO IT ... STEP BY STEP !

Congratulations! You have made a wise choice in your selection of a VENTINOX lining system. You have purchased a fine quality system researched, developed and tested to precise standards of quality in manufacturing.

It's so easy to install...you can do it step by step. Each component is designed to fit together perfectly and easily. If you are handy with a few basic tools and have a general knowledge of carpentry, you can install your VENTINOX lining system over a weekend or have a professional install it for you in a few hours.

Before you install your VENTINOX lining system, read these instructions carefully and follow them exactly.

DEAR CUSTOMER, INSTALLER, OR END USER

We welcome any comments regarding matters pertaining to our DURAVENT products.

We welcome any ideas, input or complaints and we will make sure that someone responds directly back to you.

If you are searching for tech support or product information, please visit www.duravent.com, call 800-835-4429 or email techsupport@duravent.com

GENERAL INFORMATION

CREOSOTE

When wood is burned slowly, it produces tar and other organic vapours, which combine with expelled moisture to form creosote. The creosote vapours condense in the relatively cool chimney flue of a slow burning fire. As a result, creosote residue accumulates on the flue lining. When ignited, this creosote makes an extremely hot fire.

Creosote formation in a chimney cannot be eliminated, but it can be minimized by :

1. Keeping the temperature of the gases in the chimney above 300°F.
2. Making small hot fires rather than slow burning, smoldering fires.

The chimney liner should be inspected periodically during the heating season to determine if a creosote build-up has occur. If a significant layer of creosote has accumulated (1/8" (3 mm) or more) it should be removed to reduce the risk of a chimney fire.

CHIMNEY OPERATION AND MAINTENANCE

Keep your chimney and liner clean.

Do not allow more than 1/8" build-up of creosote in your liner. Wood stoves can quickly create large deposits of creosote in the liner. Some wood stoves can create enough creosote in two weeks to cause a chimney fire.

When using a wood stove, we recommend that you :

1. Initially inspect the liner system weekly. From this you will learn how often it will be necessary to clean your liner.
2. The liner should be inspected at least once every 2 months during the heating season to determine if a creosote or soot build-up has occur. If creosote or soot has accumulated, it should be removed to reduce the risk of a chimney fire.
3. Have your liner cleaned by a qualified chimney sweep. If you want to clean your liner yourself, then use plastic, wood or stainless steel brushes. Do not use a brush that will scratch the stainless steel interior of the liner.
4. Do not expect chemical chimney cleaners to keep your liner clean. Their use does not negate the necessity of periodically inspecting and cleaning your liner.

COAL

Some coals contain large quantities of sulphur (up to 7%). When coal is burned, sulphur and coal ashes are deposited in the liner. This deposit combines with moisture to form a highly corrosive acid (Sulphuric Acid). In order to protect your liner, we recommend that you burn only low sulphur coals (less than 1% sulphur). Have your liner cleaned within 48 hours of shutting down your stove at the end of the heating season. Be certain that all the soot is removed. Wipe the liner flue using a strong solution of baking soda and water. This can be done by wrapping a rag around a chimney cleaning brush, dipping it in the baking soda-water solution, then passing it through the liner three or four times.

CHIMNEY FIRES

If you are having a chimney fire, follow these steps:

1. Close all heater doors and combustion air controls. For fireplaces, block the fireplace opening with a non-combustible material (such as an asbestos or steel sheet).
2. Alert your family to the possible danger.
3. If you require assistance, alert your fire department.
4. If possible, use a dry chemical fire extinguisher, baking soda or sand to control the fire. Do not use water, as it may cause a dangerous steam explosion.
5. Watch for smoldering or fire on combustibles next to the stove, stove pipe and chimney. Check outside to ensure that sparks and hot embers coming out of the chimney are not igniting the roof.
6. Do not use the stove again until your chimney and stove pipe have been inspected by a qualified chimney sweep or Fire Department inspector. The VENTINOX lining system has been designed to withstand the intense heat of a chimney fire. Nevertheless, chimney fires are dangerous and should be avoided.

INSTALLATION GUIDELINES

DuraVent Liners venting gas or oil appliances do not require a minimum clearance or insulation between the outside of the liner and inside of the masonry shell*. Leave enough clearance for the liner to slide into place without difficulty.

For Venting Solid Fuel Appliance, a minimum of ½" clearance is require between the outside of the liner and inside of the masonry. To meet Zero Clearance to combustible, insulation must be used. (See insulating liner section for instruction).

***Please note:** While insulation is not required for every installation (refer to UL1777 or ULC-S635 for appropriate listings or standards), the performance of the entire heating system is greatly enhanced when installing insulating materials. The venting system acts and reacts in step with the heating unit's operation. Insulation improves draft and minimizes condensation, helping flue surfaces warm up more quickly to achieve a heater's rated efficiency. Insulation is particularly important for exterior chimneys.

Read the sections outlining insulating procedures before beginning the installation.

INSTALLATION INSTRUCTIONS

- The chimney lining system can be installed in a masonry or concrete chimney that complies with the building code.
- In Canada, a new masonry or concrete chimney construction must comply with CAN/CSA A405: Design and Construction of Masonry Chimneys and Fireplaces.

INSTALLATION

• NEW CHIMNEY LINING (fig.4)

1. To install a liner into a new masonry chimney, we suggest that you install the liner as the chimney is being constructed.
2. Start the masonry chimney construction, making sure that the dimension and manufacture of the bricks and mortar conform to the Building Code.

**If you choose to insulate the liner.
See insulating liner section (Page 8) to
size the masonry chimney.**

3. To start the liner installation, attach the tee to the first length. Insert the liner with the male (smaller connection) end down. Twist lock the part together (fig.2). Attach the tee cap to the base of the tee.
- NOTE: Each joint takes 1 1/2" (38 mm) overlap.
4. Place the tee and length assembly on the support base, then add lengths along the chimney construction until the liner protrudes about 10 in. (254 mm) above the masonry chimney (fig.3).
5. Install the top support on top of the masonry chimney using lag bolts and/or cement (Fig. 5).
6. Slip the support collar over the liner until it rests on the support. Tighten the bolt to fasten it to the liner. (Fig. 5)
7. Twist lock the rain cap to the top of the liner.

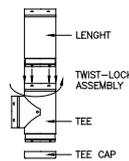


Fig. 2

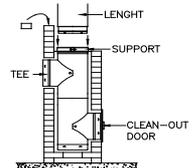


Fig. 3

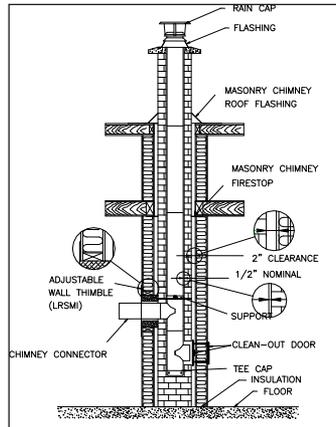


Fig. 4 - New masonry liner installation for interior chimney

8. Installation of wall radiation shield through a combustible wall.
 - From inside, frame a hole 14 1/2" x 14 1/2" (368 mm x 368 mm) in the wall where the vent will pass through.
 - Adjust the insulated wall radiation shield length to fit the wall thickness and lock the two parts together with three (3) screws supplied.

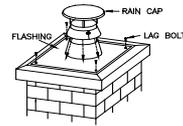


Fig. 5

- CAUTION:** Make sure the wall radiation shield is always in contact with the masonry chimney.
- Slide the wall radiation shield over the length and fix it to the wall using four (4) screws supplied (fig. 6).
- Note:** The void in the four corners between the wall radiation shield and the wall frame can be filled with fiberglass insulation.

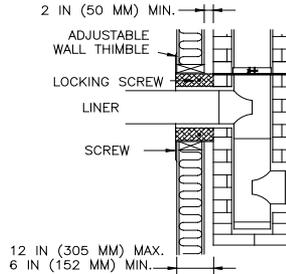


Fig. 6

EXISTING CHIMNEY RELINING (fig.7):

1. At the bottom of the masonry chimney, set up a brick or other non-combustible support on which the liner will rest.

Note: On an installation lower than 30 feet, you may support the liner from the top support.
2. Attach the tee to the first liner length. Insert the liner with the male (smaller connection) end down. Twist lock the parts together (fig. 2 page 4).
3. You may remove the horizontal branch to facilitate lowering the liner into the chimney, then attach it when in place. If you keep it, make sure it is solidly attached.
4. To lower the liner into the chimney, we suggest that you tie a small hook to a long rope and grip the hook on the tee. Make sure the rope is on the outside of the liner, so you will be able to add lengths and lower the assembly down the chimney (fig. 10). Add lengths until the liner protrudes about 10" above the masonry chimney top.
5. Install the support plate on top of the masonry chimney using lag bolts and /or cement.
6. Slip the support collar over the liner until it rests on the support plate. Tighten the bolt to fasten it to the liner.

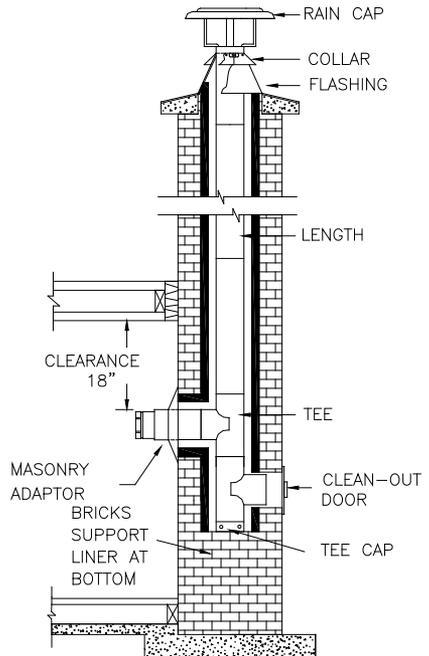


Fig. 7 - Existing masonry relining installation

**If you choose to insulate the liner
See insulating liner section (Page8).**

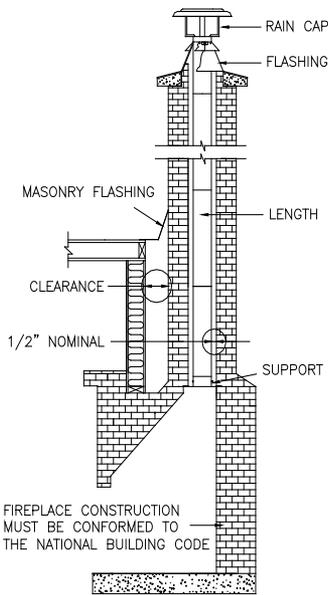


Fig. 8 - Lining system for new fireplace installation

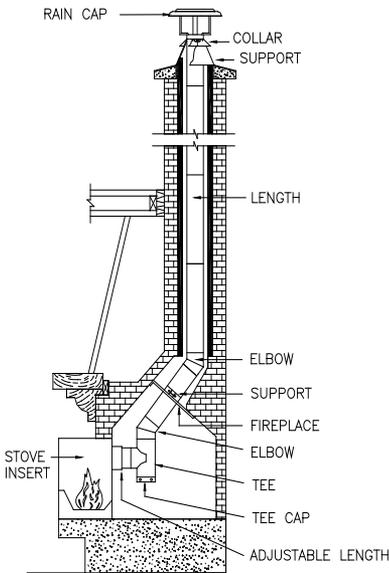


Fig. 9 - Existing fireplace relining installation

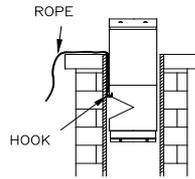


Fig. 10

7. Twist lock the rain cap to the top of the liner.
8. From inside the house, twist lock the masonry adaptor to the tee. Now fasten the adaptor's collar to the masonry wall.
Be sure there is at least 18 inch clearance between the single wall pipe and any combustible material.

INTERIOR SUPPORT

A liner installed in a fireplace chimney will require an interior support at the top of the fireplace.

- **NEW CHIMNEY LINING (fig.8)**
 - Install the support plate on top of the fireplace
 - Proceed with the erection of the liner along the chimney construction as described before.
- **EXISTING FIREPLACE (fig.9)**
 - Install the liner as described previously (see "existing chimney lining"). With the liner hanging in the fireplace, place the interior support in position and mark its location on the liner.
 - Remove the support and attach the support collar around the liner slightly above your mark.
 - Attach the support to the fireplace wall using four bolts and lags.
 - Continue connection to your stove.

INSULATING DURAVENT LINERS

General Guidelines:

DuraVent Liners have been tested and are listed to UL 1777 and ULC-S635 standard at zero clearance to combustibles and for use with all fuels. When venting wood fired heaters or fireplaces, a minimum of one inch TherMix® or at least 1/2" of ProFoil are needed to conform to the UL1777 and ULC-S635, zero clearance listing.

All temperature tests were performed on chimneys featuring a 4" nominal masonry shell and a DuraVent Liner with or without the specified insulation between the liner and interior of the chimney (no clay tiles). The outside of the chimney was surrounded with a wood enclosure at zero clearance as specified by the standard.

METHOD #1: INSULATING WITH THERMIX®

TherMix® is poured into the chimney AFTER the liner is installed. TherMix® is a pre-mixed insulation material and only requires the addition of water at the job site. Review TherMix® literature to determine the volume of TherMix® needed to fill a specific chimney.

Empty a TherMix® bag into a mortar trough or wheelbarrow. Add 7 to 9 gallons of water and mix with a hoe. Proper consistency is achieved when the material feels damp but is still granular. Little or no water should appear between fingers when a handful of TherMix® is squeezed. Correctly prepared TherMix® pours like "loose fill" into the void between the liner and the chimney.



Complete instructions are on each TherMix® bag.

During the pouring process, distribute the insulation evenly into the available space. Spacers may be used every 5 ft. to center the liner. Vibrate the liner by firmly tapping it. Continue to pour TherMix® until the chimney is filled to the top and finish as described previously. Inspect the liner at this time to ensure that no TherMix® has fallen inside the venting system.

All heaters or fireplaces can be fired up right after the installation is complete. Keep flue gas temperatures below 700 degrees F for three weeks. This allows for TherMix® to dry gradually. The operator is responsible for making sure that the heater is not over fired during this initial period.

METHOD #2: INSULATING WITH PROFOIL OR FLEXWRAP CERAMIC BLANKETS.

Ceramic blankets are attached to DuraVent Liners as the liner is installed into the chimney. Blankets are 1/2" in. thick, 8 pounds density, and faced with a 2 mil. aluminum

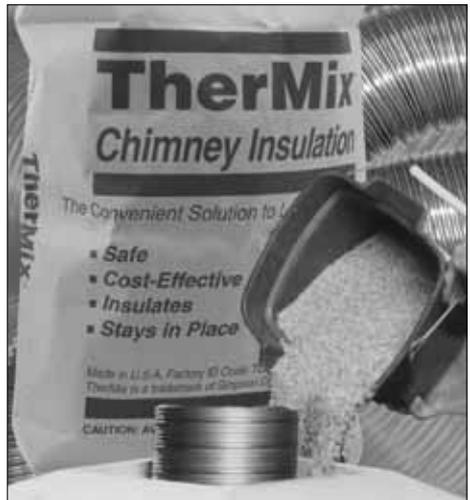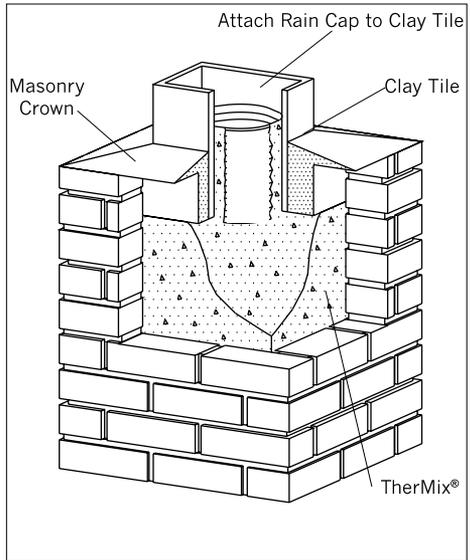

Bag of TherMix

foil. The 1/2" thick blanket is the minimum amount of insulation needed when using ProFoil. If using 1/4" ProFoil blankets, two wraps are necessary to achieve the required 1/2" insulation. Aluminum tape, wire mesh and clamps are needed for proper installation.

METHOD #1:THERMIX BENEFITS AT-A-GLANCE:

- No Health Risks: Non-fibrous, non-toxic, inert and manufactured under stringent quality controls. Safe to the installer and homeowner, today and into the future.
- Adds Safety: Chimneys insulated by TherMix reduce creosote build-up, the chance of a chimney fire is minimized and its dangers are decreased.
- Superior Performance: Featuring high “R” values, flue surface temperatures are balanced and react quickly to firing cycles of heating units. Aiding in optimal heating efficiencies.
- Durable & Tested: When properly installed, TherMix does not leak, separate or deteriorate. Field tested since 1984.
- Reinforces: Insulates the liner & flue gas while providing a strong bond for the masonry chimney.



ProFoil ceramic blanket

THERMIX: THE “THERMAL BRIDGE” BETWEEN FLEXIBLE CHIMNEY LINERS AND MASONRY

TherMix lowers temperatures on liners during over firing or chimney fires: Allows heat to be slowly absorbed into the entire mass of a chimney, where it is safely dissipated over a large surface area.

TherMix maintains higher temperatures on liners when flue gas temperatures are low: Maintaining flue gas temperatures above dew point, (~128°F), is essential to avoid condensation. The insulating mass of TherMix retains the maximum available heat close to the liner: the flue stays warm for a longer period of time after the appliance shuts down. With oil and gas appliances, keeping the flue warmer between firing cycles greatly reduces the possibility of momentary flue gas spillage which occur at the start of the next cycle. With wood burning applications, warmer flues help eliminate back puffing and other draft related problems.

TherMix minimizes fluctuations of liner surface temperatures during heating cycles. This is critical when draft must be established quickly each time an appliance fires up and when minimizing condensation within the entire height of the flue is important.

NOTE: To comply with the specifications zero clearance solid flue installation, a minimum thickness of 1” of TherMix must be installed between a listed stainless steel liner and a 4” thick masonry chimney wall.

There is no change in consistency of TherMix over time. Even after exposure to many high temperature tests, the structural integrity, chemical composition, and insulating qualities remained consistent over time, every time.

- TherMix insulated chimneys can be used right after the installation is complete, as long as flue gas temperatures do not exceed 700°F during the first 3 weeks of actual use. Please note that drying and curing are two separate processes:
- Curing or hardening of TherMix takes place over a 28-day period, with 65% to 75% of this process occurring the first week.
- Drying time depends on the thickness TherMix, the permeability of the chimney, and weather conditions. The drying process :
- Curing or hardening of TherMix takes place over a 28-day period,with 65% to 75% of this process occurring the first week.
- Drying time depends on the thickness TherMix, the permeability of the chimney, and weather conditions. The drying process is enhanced and completed over time by using the heating appliance.

TherMix Field Benefits	TherMix	Ceramic Blankets
Zero-clearance to combustibles	Yes	Yes
Ease-of-installation	Yes	Yes
Difficulties with Offsets	No	Yes
Seals dangerous cracks and voids in chimneys	Yes	No
Eliminates air leakage into chimney	Yes	No
Eliminates moisture buildup between liner & chimney structure	Yes	No
Ships UPS/FedEx (Boxes Only)	Yes	Yes
Accepted by building code officials	Yes	Yes
Can be removed	Yes	Yes
Avoids reliance on respirator during installation	Yes	No
Eliminates the need for reflective surfaces to reduce heat transfer	Yes	No
Poured method means one size fits all insulation	Yes	No
Holds liner in place	Yes	No

Figure 2

WHEN USING THERMIX

There is no need to purchase spray adhesives, tapes, wire, mesh, and/or sheet metal parts which add to the cost and time to complete a job (Figure 2.)

- TherMix can be used to insulate modular masonry fireplaces.
- TherMix stays in place when installed but can be easily removed. Dry weight per cubic foot installed is ~20lbs.

TherMix is delivered in a strong poly-lined bag or box containing all ingredients except water, which must be added to moisten the material (**Figure 3**.) Proper consistency is achieved when the material feels damp but still granular (~7 to 9 gallons of water per bag/box). *When a handful of properly moistened TherMix is squeezed hard, little to no water appears between the fingers.

During the installation, correctly prepared TherMix pours like "loose fill." TherMix is distributed within the chimney cavity by vibrating the liner. *Do not tamp or compress TherMix.



Figure 3

TABLE 2: CROSS SECTION AREA OF LINER

Liner Size	CS Area	CS Area
Round 5"	19.62in ²	
Round 6"	28.46in ²	24.60in ²
Round 7"	38.46in ²	32.20in ²
Round 8"	50.25in ²	37.20in ²
Round 9"	62.50in ²	
Round 10"	78.50in ²	49.50in ²
Round 12"	113.22in ²	

Packages of TherMix

$$= \frac{(W'' \times D'' \times H'') - (CS \times H'')}{1728 \text{ cu. in.}}$$

$$\div$$

$$3.25$$

W = Width of flue opening (in inches)

D = Depth of flue opening (in inches)

H = Height of flue (in inches)

CS = Cross Section areas (table 2)

TABLE 1: THERMIX VOLUME PER ONE FOOT OF CHIMNEY HEIGHT


Flue Opening	Diameter of Liner					
	5"	6"	7"	8"	10"	12"
7.5" x 7.5"	.25	.20	--	--	--	--
7.5" x 11.5"	.46	.40	--	--	--	--
8.5" x 8.5"	.36	.30	.23	--	--	--
8.5" x 11.5"	.54	.48	.41	--	--	--
9.5" x 9.5"	.49	.43	.36	.27	--	--
11.5" x 11.5"	.78	.72	.65	.60	.37	--
11.5" x 16.5"	1.18	1.12	1.05	.96	.77	--
12.5" x 12.5"	.95	.88	.82	.73	.53	--
14.5" x 14.5"	1.30	1.26	1.20	1.10	.92	.65
14.5" x 18.5"	1.70	1.66	1.60	1.50	1.30	1.04

METHOD #2 PROFOIL ATTACHING CERAMIC BLANKETS TO A DURAVENT LINER:

Roll out the insulation blanket on a clean surface, foil face down. Lay the liner on top and trim the blanket so that it is about 1 1/2" shorter than the liner.

Wrap the insulation around the liner lengthwise and trim it so that a butt joint is formed. Seal the joint with aluminum foil tape. Spray adhesive may be used to hold the blanket in place until it can be secured with the foil tape. A minimum of 1/2" of insulation is required. If a double layer of blanket is needed, install it with the butt joint on the opposite side.

Install ProMesh protective wire mesh over the blanket(s). The ProMesh is used to protect the ProFoil insulation as the liner is lowered into the chimney. Slip the ProMesh over the insulated liner and secure one end with a stainless steel band clamp. Pull the ProMesh towards the other end of the liner so that it tightens snugly around the insulation, then trim off the excess. Secure this end with a stainless steel band clamp.

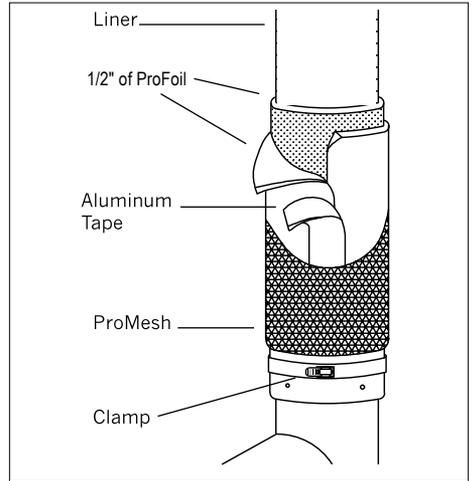

Attaching a ceramic blanket

M&G DURAVENT LIMITED LIFETIME WARRANTY

M&G DuraVent, Inc. ("DuraVent") provides this limited lifetime warranty for all of its products with the exception of Ventinox® (lifetime), and PolyPro® (ten years). Subject to the limitations set forth below, DuraVent warrants that its products will be free from defects in material or manufacturing, if properly installed, maintained and used. DuraVent products are fully warranted if installed only by a professional installer. This Warranty is transferable from the original homeowner to the buyer of the home. This warranty does not cover normal wear and tear, smoke damage or damage caused by chimney fires, acts of God, or any product that was: (1) purchased other than from an authorized DuraVent dealer, retailer or distributor; (2) modified or altered; (3) improperly serviced, inspected or cleaned; or (4) subject to negligence or any use not in accordance with the installation instructions included with the product as determined by DuraVent. Installation instructions are available online at www.duravent.com under Support/Literature and through our Customer Service Department 800-835-4429 or customerservice@duravent.com. This limited lifetime warranty applies only to parts manufactured by DuraVent.

DuraVent provides the following warranties for its products: One Hundred Percent (100%) MSRP 15 years from the date of purchase, and Fifty Percent (50%) thereafter, except for the following limitations on: all Termination Caps and DuraBlack® are warranted at One Hundred Percent (100%) for five years.

All warranty obligations of DuraVent shall be limited to repair or replacement of the defective product pursuant to the terms and conditions applicable to each product line. These remedies shall constitute DuraVent's sole obligation and sole remedy under this warranty. This warranty provides no cash surrender value. The terms and conditions of this warranty may not be modified, altered or waived by any action, inaction or representation, whether oral or in writing, except upon the express, written authority of an executive officer of DuraVent.

Corn, bio-fuels, driftwood or other wood containing salt, preservative-treated lumber, plastic and household trash or garbage, or wood pellets containing such materials must not be burned in the appliance or fireplace. In case of a chimney fire, the chimney must be inspected and approved by a certified Chimney Sweep before reuse. After each annual inspection, maintenance, and cleaning, the certified Chimney Sweep must fill out and date the appropriate section of the warranty card provided with the chimney liner.

LIMITATIONS ON INTERNET SALES: Notwithstanding any other terms or conditions of this Limited Lifetime Warranty, DuraVent provides no warranty for the following specific products if such products are not installed by a qualified professional installer: DuraTech®, DuraTech® DTC, DuraPlus HTC®, DuraChimney® II, PelletVent Pro®, DirectVent Pro®, FasNSeal®, FasNSeal® W2, FasNSeal® Flex, and PolyPro®, and M&G DuraVent's relining products including DuraLiner®, DuraFlex® (SW, Pro, 316, 304), and Ventinox®. For purposes of this warranty, a trained professional installer is defined as one of the following: licensed contractors with prior chimney installation experience, CSIA Certified Chimney Sweeps, NFI Certified Specialists, or WETT Certified Professionals.

DuraVent must be notified and given the opportunity to inspect defective product prior to replacement under the terms of this limited lifetime warranty. All warranty claims must be submitted with proof of purchase. Labor and installation costs are not covered under this warranty. To obtain warranty service contact: DuraVent Warranty Service, 877 Cotting Ct., Vacaville CA 95688, or call 800-835-4429.

WHERE LAWFUL, DURAVENT DISCLAIMS ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL DURAVENT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR SPECIAL DAMAGES OR DIRECT OR INDIRECT LOSS OF ANY KIND, INCLUDING BUT NOT LIMITED TO PROPERTY DAMAGE AND PERSONAL INJURY. DURAVENT'S ENTIRE LIABILITY IS LIMITED TO THE PURCHASE PRICE OF THIS PRODUCT. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

For the most up-to-date installation instructions, see www.duravent.com

REV 2.27.2013

DuraVent
Member of  M&G Group



PIVENTINOX-EN

www.duravent.com 800-835-4429

Member of M&G Group. M&G DuraVent© 2014

Information published in all M&G DuraVent literature is current at time of publication and is subject to change without notice.